

10589 Airline Hose Kit 10m for Compressed Air




Making an air line with quick release fittings

1. Slip the hose clips **10250** over the hose at each end.
2. Push the quick release fittings into each end of the hose.
3. Slip the hose clip clamps over the fitting and tighten to the hose using a spanner or a flat head screwdriver.
4. Airline is complete.



Connecting fittings to compressor and equipment

1. PTFE tape all threads, 3 times around is normally enough, wrap it clockwise around the thread of the joint. The easiest way to remember which way to wind the tape is to hold the pipe in your left hand and apply the tape with your right hand.
2. Screw in the **3086** to the compressor.
3. Screw in the **1362** to the equipment and connect the air lines you made on the previous slide.

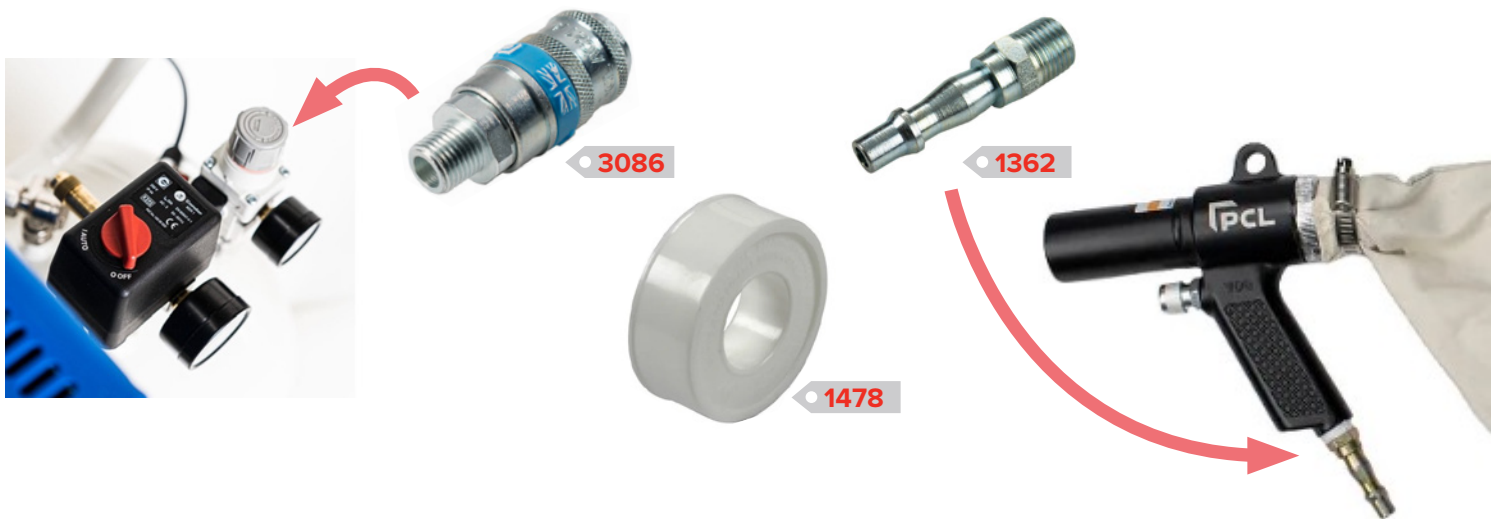

Kit contains

Quantity	Part no.	Part name
1	1364	PCL QR Tail / 8mm hose
2	10250	Hose Clip Worm Drive 9.5mm - 12mm
1	1354	Air Hose Braided 12mm x 10m Coil
1	1360	PCL Airflow QR Body 8mm Hose
1	3086	PCL QR Body / 1/4 BSP Male
1	1478	PTFE Joint Sealing Tape white 12mm x 12m roll
1	1362	PCL QR Connector Tail to 1/4" BSP Male

Order the
complete kit -
part no. **10589**
at lionpic.co.uk
or scan the
QR code

